

**Felkodsläsare 15-1369 OBDII+VOLVO**

**Feilkodeleser 15-1369 OBDII+VOLVO**

**Virhekoodinlukija 15-1369 OBDII+VOLVO**

**Fejlkodelæsere 15-1369 OBDII+VOLVO**

## **Main Menu**

### **OBDII Diagnosis**

Read Codes

Erase Codes

Live Data

View Freeze Frame

I/M Readiness

Since DTCs cleared

This Drive Cycle

MIL Status

Misfire Monitor

Fuel System Mon

Comp. Component

Catalyst Mon

Htd Catalyst

Evap System Mon

Sec Air System

A/C Refrig Mon

Oxygen Sens Mon

Oxygen Sens Htr

EGR System

## Vehicle Info

Vehicle ID Number

Calibration ID

Cal. Vertif. Number

Protocol

## **Volvo Diagnostic**

VOLVO 99 to 04

VOLVO 05 forw.

Read codes

Erase codes

Reset SRL

View System Def.

ABS – Anti Block System

ADM – Additive Dosing Module

AEM – Accessory Electronic Module

AFM – AM FM Module

ATM - Antenna Module

AUD -Audio Module

AUM – Audio Module

BCM – Break Control Module

CCM – Climate Control Module

CEM – Central Electronic Module

CPM – Combustion Preheater Module

DDM – Driver Door Module

DEM – Differential Electronic Module

DIM - Module

ECM – Engine Control Module

EFI – Electronic Fuel Injection (system)

EPS – Electronical Power Steering Module  
GDM – Gas Discharge Module  
GPS – Global Positioning System Module  
IAM – Information Amusement Module  
ICM – Infotainment Control Module  
KVM – Keyless Vehicle Module  
MMM – Multi Media Module  
MP1 – Media Player 1 (Minidisc)  
MP2 – Media Player 2 (CD)  
MPM – Mediaplayer  
PAM – Parking Assistance Module  
PDM – Passenger Door Module  
PHM – Phone Module  
PSM – Power Seat Module  
REM – Rear Electronic Module  
RTI – Road Traffic Information  
SAS – Steering Angle Sensor  
SRS – Supplementary Restraint System  
SUB Subwoofer  
SUM – Suspension Module  
SWM – Steering Wheel Module  
TCM – Transmission Control Module  
TMC – Traffic Channel Module  
TRM – Trailer Module  
UEM – Upper Electronic Module

**Language**

Dansk

English

Suomi

Norske

Svensk

**Contrast**

**Unit of Measure**

English

Metric